

RISK ASSESSMENT & CONTROL MEASURES ELEVATING WORK PLATFORMS (EWP)

Instant Scaffolds WA PO Box 129

Burswood WA 6100

Ph: 9472 7600 Fx: (08) 9472 7611

Task Description	<u>Hazard</u>	Risk 5	Risk 4	Control Measures	Revised Class 2	<u>Comments</u>	Responsible Operator/Supervisor
Operating EWP	Death/Serious Injury	✓		You must have been instructed on the safe use of this equipment & if required by law	✓	Relevant Training/Orientation/Induction	Operator/Supervisor
				you must hold the correct certificate of competency to use this equipment			
Operating EWP	Death/Serious Injury	√		Read & Understand operating manual	✓	Relevant Training/Orientation/Induction	Operator/Supervisor
Changing EWP Operating	Death/Serious Injury	√		Obey all Danger, Warning, Caution, Important notices & Operation Instructions	√	Relevant Training/Orientation/Induction	Operator/Supervisor
& Safety Systems							
Operating EWP Combustion Models Only	Death/Serious Injury	√		Be aware that this equipment must only be used in areas with adequate ventilation.	√	Relevant Training/Orientation/Induction	Operator/Supervisor
EWP Maintenance	Personal Injury		✓	Only perform daily checks, maintenance as instructed/call owner if unsure!	✓	Relevant Training/Orientation/Induction	Operator/Supervisor
Driving Elevated	Fall from Platform	√		Never stand or sit on handrails or mid rail, ensure gate is securely closed, carry out pre-operational checks as described in operators manual. Always wear harness in boom type EWP's.	√	Relevant Training/Orientation/Induction	Operator/Supervisor
Driving Elevated	Tip Over	√		Insure your tyres are inflated to the correct pressure.	√	Relevant Training/Orientation/Induction	Operator/Supervisor
Driving Elevated	Collison Injury		\checkmark	Ensure you look up, down, forward, backward, left & right when mobiling the EWP	✓	,	Operator/Supervisor
Driving Lowered	Collison Injury		√	Ensure you look up, down, forward, backward, left & right when driving the EWP. Take extreme care when driving down a slop. Never exceed EWP gradability.	√	Relevant Training/Orientation/Induction	Operator/Supervisor
Elevating EWP	Collison Injury	√		Ensure you look up, down, forward, backward, left & right when elevating the EWP	√	Relevant Training/Orientation/Induction	Operator/Supervisor
Elevating EWP	Tip Over	√		Never operate the EWP in strong wind conditions, stop using the EWP when it is deemed to be unsafe.	√	Relevant Training/Orientation/Induction	Operator/Supervisor
Elevating/Driving EWP	Electrocution	√		Be aware of electrocution hazard ask competent person for safe clearances & refer warning signs & operator manual as a guide. Understand your EWP is not insulated.	√	Relevant Training/Orientation/Induction	Operator/Supervisor
Elevating/Driving EWP	Tip Over	V		Never elevate the platform unless you are on a firm & level surface, which will safely support the load of the EWP. Never overload the EWP.	√	Relevant Training/Orientation/Induction	Operator/Supervisor
Lowering EWP	Collision injury to yourself & others	√		Always check below before lowering the EWP. Ensure there are no obstructions under the platform & no persons in close proximity.	√	Relevant Training/Orientation/Induction	Operator/Supervisor
Working from EWP	Tip Over	√		Do not use as a crane or lifting device, do not overload platform.	√	Relevant Training/Orientation/Induction	Operator/Supervisor
Working from EWP	Injury to personnel			Ensure all tools & material are safely stowed/secured in the platform to prevent materials or	✓	Relevant Training/Orientation/Induction	Operator/Supervisor
	Below			equipment being dropped over the side.			
Working from EWP	Tip Over	✓		Never use your EWP to push or pull other objects	✓	Relevant Training/Orientation/Induction	Operator/Supervisor
Working from EWP	Fall from Platform	✓		Never leave the EWP to gain access to a building or any other equipment.	✓	Relevant Training/Orientation/Induction	Operator/Supervisor
Working from EWP	Tip Over	✓		Never overload your platform; always distribute the load evenly over the platform. Locate & understand your Safe Working Load (S.W.L)	√	Relevant Training/Orientation/Induction	Operator/Supervisor

Level of risk & Description:

©CATASTROPHIC, @MAJOR, @MODERATE, @MINOR, @INSIGNIFICANT

See Reverse Side for more Safety Information on EWP



RISK ASSESSMENT & CONTROL MEASURES ELEVATING WORK PLATFORMS (EWP)

Instant Scaffolds WA PO Box 129 Burswood WA 6100

Surswood WA 0100

Ph: 9472 7600 Fx: (08) 9472 7611

Task Description	<u>Hazard</u>	Risk 5	Risk 4	Control Measures	Revised Class 2	<u>Comments</u>	Responsible Operator/Supervisor
Working from EWP	All of above	√		Never use damaged or malfunctioning equipment. Never modify EWP.	√	Call Instant Scaffolds WA immediately if unsure	Operator/Supervisor
Working from EWP	Fall from EWP	✓		Should the platform fail to lower never climb down elevating assembly.	✓	Relevant Training/Orientation/Induction	Operator/Supervisor
Working from EWP	Fall from EWP	\checkmark		Never use ladders, scaffolding, or other objects on the platform to gain additional height	√	Relevant Training/Orientation/Induction	Operator/Supervisor
Securing EWP after use	Unathorized use		√	Lower platform at the end of work shift, remove keys, position in safe location	✓	Relevant Training/Orientation/Induction	Operator/Supervisor
Driving EWP	Fall through ground Surface	✓		Know the weight of your EWP & ensure a competent person has checked the ground surface where you intend to use the EWP	√	Relevant Training/Orientation/Induction	Operator/Supervisor
Operating EWP	Burns/Explosion Injury	√		Turn gas bottle valve off when not in use. Stop using the equipment if you smell gas. Do not smoke near fuel sources.	√	Relevant Training/Orientation/Induction	Operator/Supervisor
Operating EWP	Death/Serious Injury	√		If the platform should fail to lower ask a person on the ground to operate the emergency lowering valve (refer Operating Manual)	√	Relevant Training/Orientation/Induction	Operator/Supervisor
EWP Maintenance	Burns		√	Never check radiator water level when engine is hot	√	Relevant Training/Orientation/Induction	Operator/Supervisor
EWP Maintenance	Burns		√	Only change batteries in well ventilated areas	√	Relevant Training/Orientation/Induction	Operator/Supervisor
EWP Maintenance	Burns		✓	Always wear safety glasses when inspecting batteries. No smoking or naked flames	√	Relevant Training/Orientation/Induction	Operator/Supervisor
Operating EWP	Crushing Injury	√		Never enter the elevating assembly when the EWP is elevated	√	Relevant Training/Orientation/Induction	Operator/Supervisor
Daily Checks	Tip Over	√		Check wheels bolts/nuts for tightness before using EWP	✓	Relevant Training/Orientation/Induction	Operator/Supervisor
Daily Checks	Tip Over	√		Carry out daily checks as per operating manual, before each work shift	√	Relevant Training/Orientation/Induction	Operator/Supervisor
Daily Checks	Personal Injury		√	Carry out daily checks inspecting for missing peeling or illegible safety decals, also notify Instant Scaffolds WA immediately if your operators manual or log book are missing	√	Relevant Training/Orientation/Induction	Operator/Supervisor
Handling Vertical Lifts	Personal Injury		√	Ensure you follow the correct procedure when moving, lifting, positioning & setting up your Vertical Lift.	√	Relevant Training/Orientation/Induction	Operator/Supervisor
EWP Maintenance	Burns/Explosion Injury	√		Only re-fuel the EWP when the engine is shut down, in an area free from sparks, flame and other hazards which may cause fire or explosion	√	Relevant Training/Orientation/Induction	Operator/Supervisor

NB: IN ADDITION TO THE RISKS AND CONTROL MEASURES LISTED ABOVE FOR BOOM TYPE ELVATING WORK PLATFORMS THE FOLLOWING SHOULD ALSO BE NOTED

BOOM TYPE EWP'S

Task Description	<u>Hazard</u>	Risk 5	Control Measures	Revised Class 2	Commonte	Responsible Operator/Supervisor
Operating EWP	Death/Serious Injury		If Boom Type EWP has reach/height of 11mtrs or over, you must be holder of a WP type Certificate of Competency	√	Relevant Training/Orientation/Induction	Operator/Supervisor
Operating EWP	Death/Serious Injury		All occupants must wear approved fall restraint device properly attached to designated platform anchorage points	√	Relevant Training/Orientation/Induction	Operator/Supervisor
Operating EWP	Death/Serious Injury	✓	Never elevate the machine when wind speeds exceed 12.5m/sec	√	Relevant Training/Orientation/Induction	Operator/Supervisor
Operating EWP	Death/Serious Injury	√	Never enter or exit platform while elevated	√	Relevant Training/Orientation/Induction	Operator/Supervisor
Operating EWP	Death/Serious Injury		If alarm sounds while boom is elevated stop and carefully retract boom and lower platform without rotating	√	Relevant Training/Orientation/Induction	Operator/Supervisor